Register your product and get support at

www.philips.com/welcome

RQ1180, RQ1160, RQ1150

PHILIPS

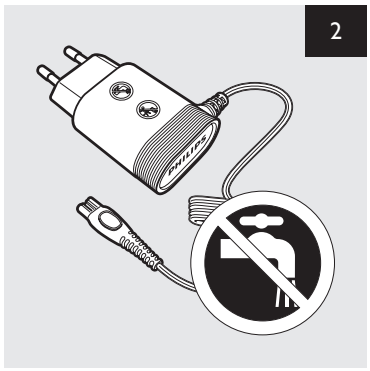
2

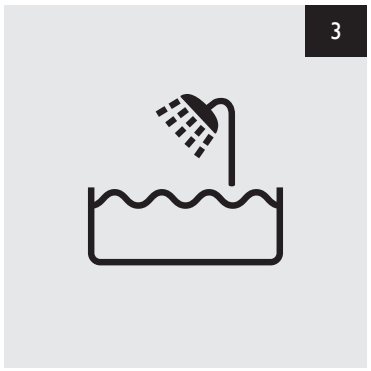
3

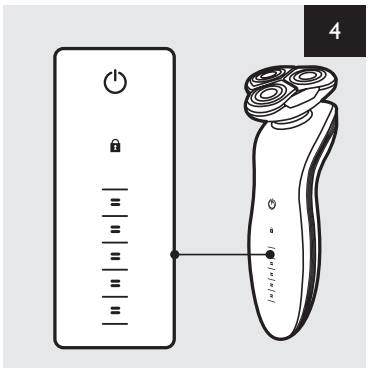
4

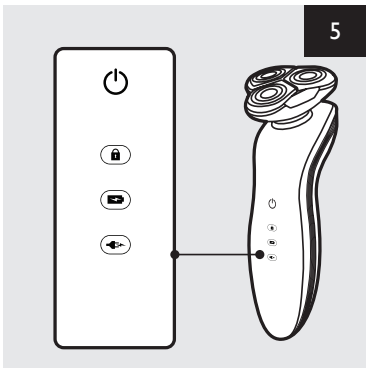
5

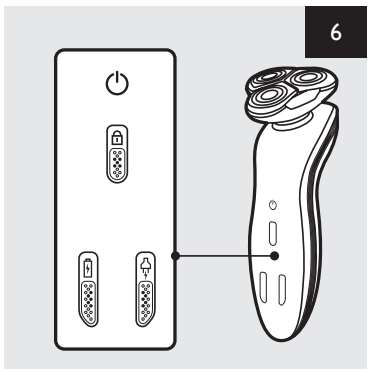
6

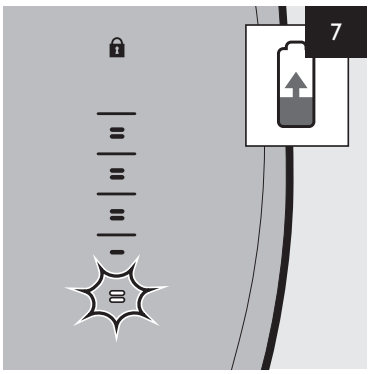
7

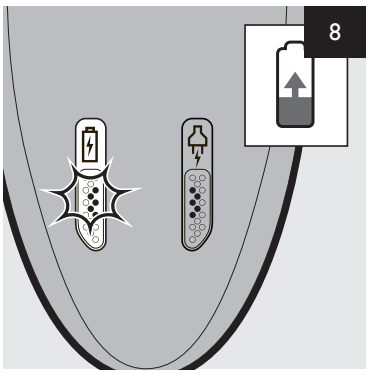
8

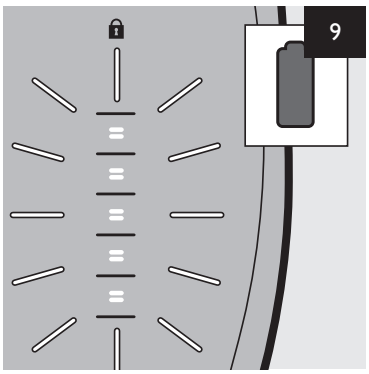
9

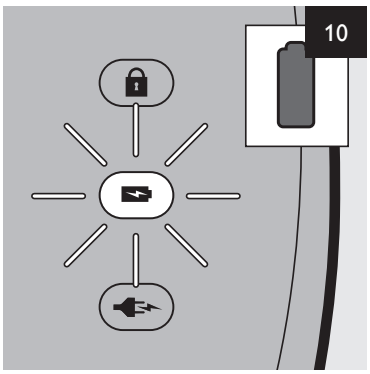
10

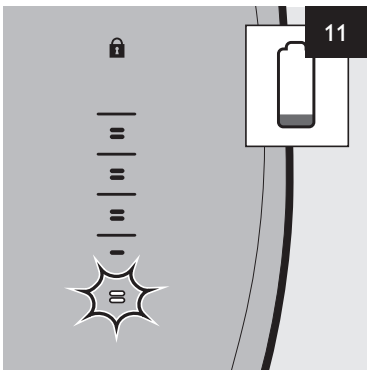
11

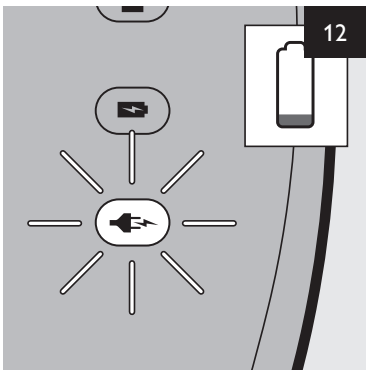
12

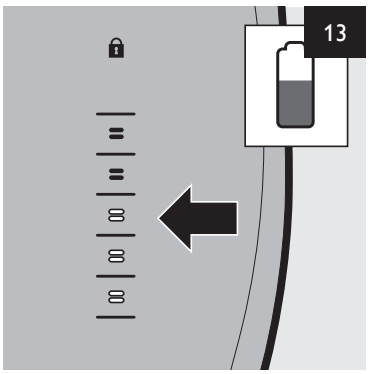
13

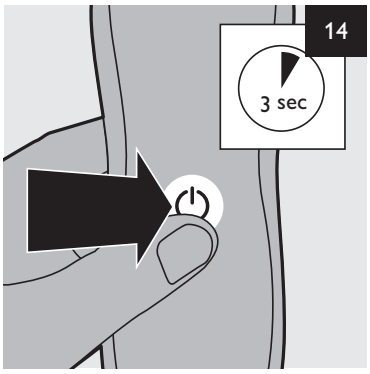
14
3 sec

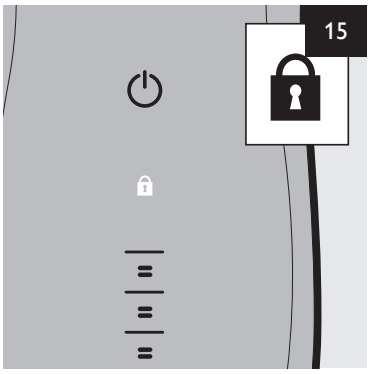
15

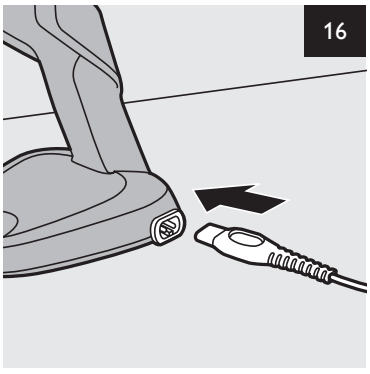
16

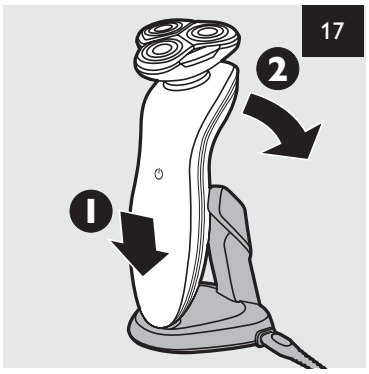
17
2
1

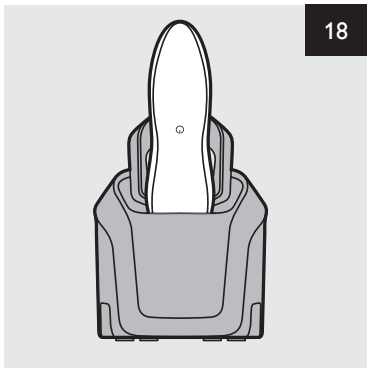
18

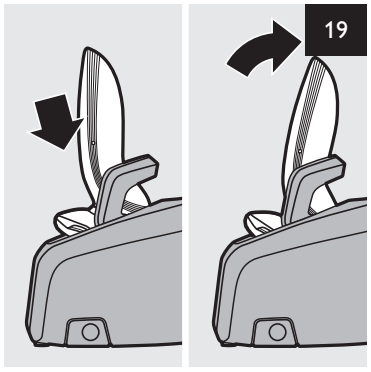
19

20

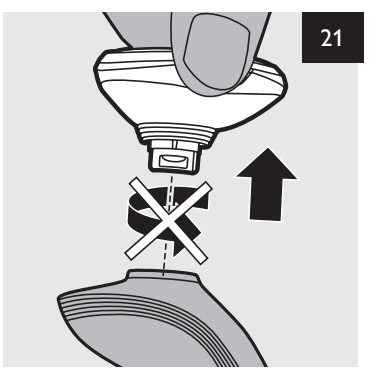
21

1

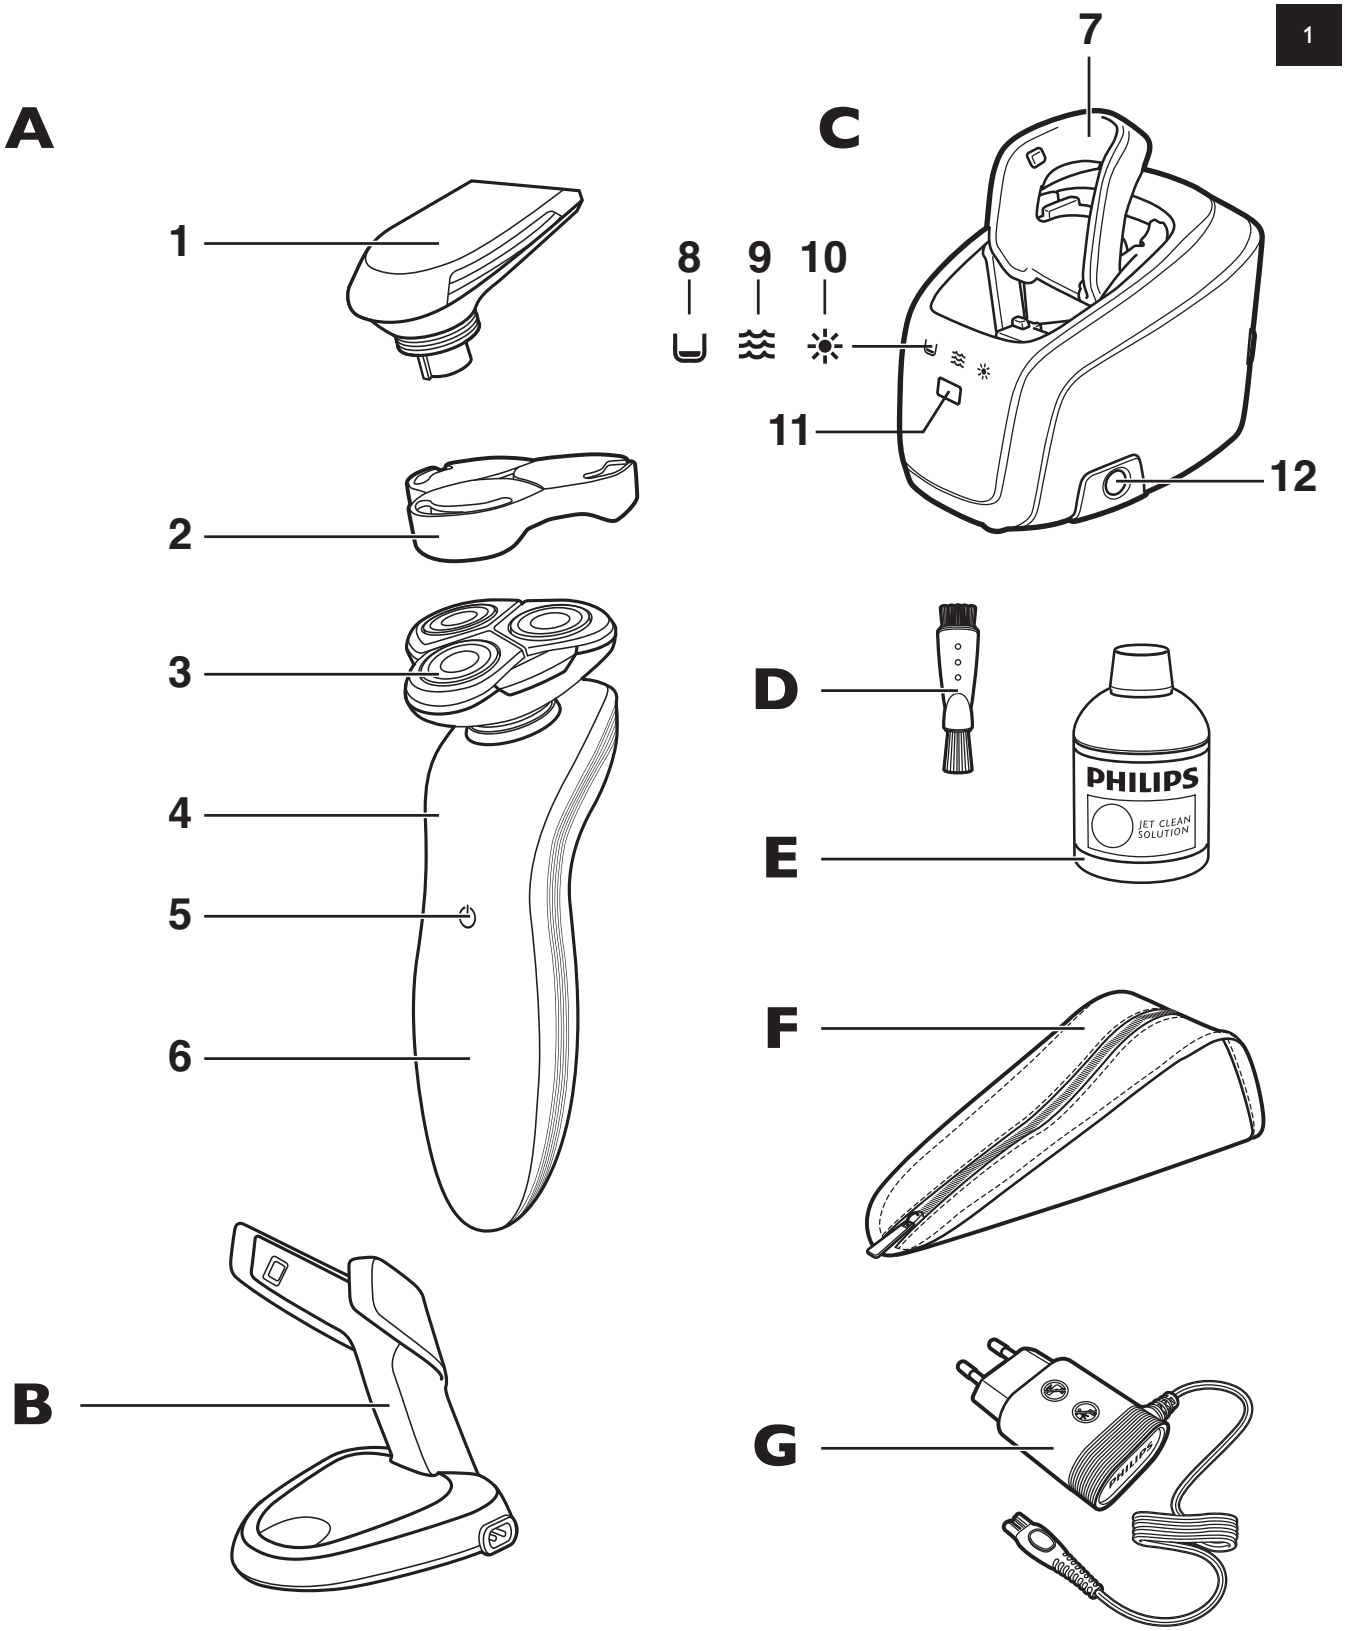
A
1
2
3
4
5
6
B
C
7
8
9
10
11
12
D
E
PHILIPS
JET CLEAN SOLUTION
F
G
PHILIPS

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.
Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

General description (Fig. 1)

A Shaver (RQ1180/RQ1160/RQ1150)
- **1** Trimmer
- **2** Protection cap
- **3** Shaving unit
- **4** Shaver
- **5** Shaver on/off button
- **6** Display

B Charger
C Jet Clean System (specific types only)
- **1** Shaver holder
- **2** 'Cleaning chamber empty' symbol
- **3** Cleaning symbol
- **4** Drying symbol
- **5** Jet Clean System on/off button
- **6** Cleaning chamber release button

D Cleaning brush
E Cleaning fluid
F Pouch (specific types only)
G Adapter

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Note: In this user manual the term 'appliances' refers to the shaver and the Jet Clean System. If your shaver does not come with a Jet Clean System, it refers to the shaver only.

General

Danger

- Make sure the adapter does not get wet (Fig. 2).

Warning

- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- These appliances are not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliances.
- Be careful with hot water when you clean the appliances. Always check if the water is not too hot, to prevent your hands from getting burnt.

Caution

- Never immerse the Jet Clean System and the charger in water nor rinse them under the tap.
- The appliances and accessories are not dishwasher-proof.
- Always place and use the appliances on a surface that is fluid-resistant.
- Use, charge and store the appliances at a temperature between 5°C and 35°C.
- Only use the accessories supplied.
- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts.
- Do not use the appliances if they are damaged.
- If the adapter or any of the other accessories is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- Water may leak from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

Jet Clean system (specific types only)

Caution

- Only use the Jet Clean System with the original HQ200 cleaning fluid.
- Always place the Jet Clean System on a stable, level and horizontal surface to prevent leakage.
- Never immerse the Jet Clean System in water.
- Empty the cleaning chamber and clean it thoroughly by rinsing it with hot tap water every 15 days.
- The Jet Clean System thoroughly cleans but does not disinfect your shaver, therefore do not share the shaver with others.
- The cleaning chamber of the Jet Clean System is not dishwasher-proof.
- When the Jet Clean System is ready for use, do not move it to prevent leakage of cleaning fluid.

Compliance with standards

- This shaver complies with the internationally approved safety regulations and can be safely used in the bath or shower and cleaned under the tap (Fig. 3).
- These Philips appliances comply with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this important information booklet and in the usage information booklet packed with the shaver, the appliances are safe to use based on scientific evidence available today.

The display

Note: Before you use the shaver for the first time, remove the protective foil from the display.

The three shaver types (RQ1180, RQ1160 and RQ1150) have different displays, which are shown in the figures below.
- RQ1180 (Fig. 4)
- RQ1160 (Fig. 5)
- RQ1150 (Fig. 6)

Charging

- Charging takes approx. 1 hour.

RQ1180
- When the shaver is charging, first the bottom charging light flashes, then the second charging light, and so on until the shaver is fully charged (Fig. 7).
- Quick charge: When the shaver contains enough energy for one shave, the bottom charging light alternately flashes orange and white.

RQ1160/RQ1150
- When the shaver is charging, the battery symbol flashes until the shaver is fully charged. (Fig. 8)
- Quick charge: When the shaver contains enough energy for one shave, the plug symbol and battery symbol flash alternately.

Note: The displays of types RQ1160 and RQ1150 look different, but work in the same way.

Battery fully charged

RQ1180
- When the battery is fully charged, all charging lights light up continuously. After approx. 30 minutes the display automatically switches off again. (Fig. 9)

RQ1160/RQ1150
- When the battery is fully charged, the battery symbol lights up continuously. After approx. 30 minutes the display automatically switches off again. (Fig. 10)

Note: The displays of types RQ1160 and RQ1150 look different, but work in the same way.

Battery low

RQ1180
- When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the bottom charging light flashes orange. (Fig. 11)
- When you switch off the shaver, the bottom charging light continues to flash for a few seconds.

RQ1160/RQ1150
- When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the plug symbol flashes (Fig. 12).
- When you switch off the shaver, the plug symbol continues to flash for a few seconds.

Note: The displays of types RQ1160 and RQ1150 look different, but work in the same way.

Remaining battery capacity

RQ1180
- The remaining battery capacity is indicated by the number of charging lights that are on. (Fig. 13)

Travel lock

You can lock the shaver when you are going to travel. The travel lock prevents the shaver from being switched on by accident.

Activating the travel lock

1 Press the on/off button for 3 seconds to enter the travel lock mode (Fig. 14).
◗ The lock symbol lights up on the display. -tekening- (Fig. 15)

Note: The displays of types RQ1180, RQ1160 and RQ1150 look different, but show the same symbol.

Deactivating the travel lock

1 Press the on/off button for 3 seconds.
◗ The motor starts running to indicate that the travel lock has been deactivated.
The shaver is now ready for use again.

Note: When you place the shaver in the plugged-in charger or Jet Clean System, the travel lock is automatically deactivated.

Charging

Charging takes approx. 1 hour.
RQ1180/RQ1160: A fully charged shaver has a shaving time of up to 50 minutes/15 days.
RQ1150: A fully charged shaver has a shaving time of up to 40 minutes/12 days.
Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty (see section 'Battery low' in chapter 'The display').

Quick charge

After the shaver has charged for 5 minutes, it contains enough energy for one shave.

Charging in the charger

1 Put the small plug in the charger (Fig. 16).

2 Put the adapter in the wall socket.

3 Put the shaver in the charger (1) and push it backwards (2) ('click'). (Fig. 17)
◗ The display shows that the shaver is charging (see chapter 'The display').

Charging in the Jet Clean System (specific types only)

1 Put the small plug in the Jet Clean System.

2 Put the adapter in the wall socket.

3 Place the shaver upside down in the holder with the display pointing towards the front of the Jet Clean System (Fig. 18).

Note: RQ1180 only: when you turn the shaver upside down, the battery indication on the display is also turned upside down so you can still see to what level the battery is charged.

4 Press the shaver tightly into the holder to lock it into place (Fig. 19).

Note: The shaver cannot be placed in the Jet Clean System when the protection cap is on the shaving unit or when the trimmer is placed on the shaver.

◗ The display shows that the shaver is charging (see chapter 'The display').

Using the shaver

Shaving

1 Press the on/off button once to switch on the shaver.

◗ RQ1180: The display lights up for a few seconds.

2 Move the shaving heads over your skin. Make circular movements (Fig. 20).

- Do not make straight movements.
- Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

3 Press the on/off button once to switch off the shaver.

◗ RQ1180: The display lights up for a few seconds and then shows the remaining battery capacity.

Wet shaving

You can also use this shaver on a wet face with shaving foam or shaving gel.
To shave with shaving foam or shaving gel, follow the steps below:

1 Apply some water to your skin.

2 Apply shaving foam or shaving gel to your skin.

3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.

4 Press the on/off button once to switch on the shaver.

5 Move the shaving heads in circular movements over your skin.

Note: Rinse the shaver under the tap regularly to ensure that it continues to glide smoothly over your skin.

6 Dry your face and thoroughly clean the shaver after use (see chapter 'Cleaning and maintenance').

Note: Make sure you rinse all foam or shaving gel off the shaver.

Trimming

You can use the trimmer to groom your sideburns and moustache.

1 Pull the shaving unit straight off the shaver (Fig. 21).

Note: Do not turn the shaving unit while you pull it off the shaver.

2 Insert the lug of the trimmer into the slot in the top of the shaver (1). Then press the trimmer downwards (2) to attach it to the shaver ('click') (Fig. 22).

3 Press the on/off button once to switch on the trimmer.

◗ RQ1180: The display lights up for a few seconds.

4 You can now start trimming.

5 Press the on/off button once to switch off the trimmer.

◗ RQ1180: The display lights up for a few seconds to show the remaining battery capacity.

6 Pull the trimmer straight off the shaver (Fig. 23).

Note: Do not turn the trimming unit while you pull it off the shaver.

7 Insert the lug of the shaving unit into the slot in the top of the shaver (1). Then press the shaving unit downwards (2) to attach it to the shaver ('click') (Fig. 24).

Cleaning and maintenance

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance and the Jet Clean System.

- The best and most hygienic way to clean the shaver is in the Jet Clean System (specific types only). You can also rinse the shaver under the tap or clean it with the brush supplied.
- Be careful with hot water. Always check if the water is not too hot, to prevent your hands from getting burnt.
- Clean the shaver after every shave for optimal shaving performance.
- You can clean the outside of the shaver with a damp cloth.
- Regular cleaning guarantees better shaving performance.

Cleaning the shaving unit

Be careful with hot water. Always check if the water is not too hot, to prevent your hands from getting burnt.

1 Rinse the shaving unit under a hot tap for some time (Fig. 25).

Note: You can also brush the shaving unit with the cleaning brush supplied.

2 Pull the shaving head holder off the bottom part of the shaving unit and rinse it under a hot tap for 30 seconds (Fig. 26).

Note: You can also brush the shaving head holder with the cleaning brush supplied.

3 Carefully shake off excess water and let the shaving unit dry.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

4 Reattach the shaving head holder to the bottom of the shaving unit ('click') (Fig. 27).

Cleaning the shaving unit in the Jet Clean System (specific types only)

The Jet Clean System has an automatic cleaning program. When you press the on/off button, the Jet Clean System starts cleaning in the automatic cleaning program.

Preparing the Jet Clean System for use

Fill the cleaning chamber before first use.

1 Put the small plug in the Jet Clean System.

2 Put the adapter in the wall socket.
◗ The holder automatically moves to the highest position.

3 Simultaneously press the release buttons on both sides of the cleaning chamber (1). Then lift the Jet Clean System off the cleaning chamber (2). (Fig. 28)
◗ The cleaning chamber remains behind.

4 Unscrew the cap from the bottle with cleaning fluid.

5 Fill the cleaning chamber with HQ200 cleaning fluid to a level between the two lines (Fig. 29).

6 Place the Jet Clean System back onto the cleaning chamber (Fig. 30).
Make sure the release buttons click back into place.

Using the Jet Clean System

Note: If you use the shaver with shaving foam or shaving gel, we advise you to rinse it under the hot tap before you clean it in the Jet Clean System. This guarantees an optimal lifetime for the cleaning fluid.

1 Place the shaver upside down in the holder with the display pointing towards the front of the Jet Clean System (Fig. 18).

2 Press the shaver tightly into the holder to lock it into place (Fig. 19).
◗ The display shows that the shaver is charging (see chapter 'The display').

3 Press the on/off button on the Jet Clean System to start the cleaning program. (Fig. 31)
◗ The shaver display stops showing the charging indication.
◗ The cleaning light starts to flash and the shaver is automatically lowered into the cleaning fluid (Fig. 32).
◗ The cleaning light flashes throughout the cleaning program, which takes a few minutes.
◗ During the first phase of the cleaning program, the shaver automatically switches on and off several times and moves up and down.
◗ During the second phase of the cleaning program, the shaver is placed in the drying position, indicated by the flashing drying symbol. This phase takes approx. 2 hours. The shaver stays in this position until the end of the program. (Fig. 33)
◗ After the cleaning program, the charging indication appears on the shaver display (see chapter 'The display').

Note: If you press the on/off button of the Jet Clean System during the cleaning program, the program aborts. In this case, the cleaning or drying light stops flashing and the holder moves to the highest position.

Note: If you remove the adapter from the wall socket during the cleaning program, the program aborts. The holder remains in its current position. When you put the adapter back into the wall socket, the holder moves to the highest position.

- When the cleaning fluid drops below the minimum level, the 'cleaning chamber empty' symbol starts to flash and the holder returns to its starting position (Fig. 34).
- If you use the washing machine to clean your shaver every day, you need to refill the cleaning chamber approx. every 15 days.

Cleaning the Jet Clean System

Clean the cleaning chamber every 15 days.
You can wipe the outside of the Jet Clean System with a damp cloth.

1 Simultaneously press the release buttons on both sides of the Jet Clean System (1). Then lift the Jet Clean System off the cleaning chamber (2). (Fig. 28)
◗ The cleaning chamber remains behind.

2 Pour any remaining cleaning fluid out of the cleaning chamber. (Fig. 35)
You can simply pour the cleaning fluid down the sink.

3 Rinse the cleaning chamber under the tap (Fig. 36).

The cleaning chamber is not dishwasher-proof.

4 Fill the cleaning chamber with HQ200 cleaning fluid to a level between the two lines (Fig. 29).

5 Place the Jet Clean System back onto the cleaning chamber. (Fig. 30)
Make sure the release buttons click back into place.

Extra-thorough cleaning method

Make sure the appliance is switched off.

1 Pull the shaving head holder off the bottom part of the shaving unit (Fig. 26).

2 Slide the green retaining frame in the direction of the arrows indicated of the retaining frame (Fig. 37).

3 Lift the retaining frame out of the shaving head holder. (Fig. 38)

4 Remove the cutter from the shaving guard (Fig. 39).

Note: Do not clean more than one cutter and shaving guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

5 Clean the cutter with the cleaning brush supplied (Fig. 40).

6 Clean the inside of the shaving guard. (Fig. 41)

7 After cleaning, place the cutter back into the shaving guard with the cutter legs pointing downwards. (Fig. 42)

8 Place the retaining frame back onto the shaving head holder. (Fig. 43)

9 Slide the guard back into place ('click'). (Fig. 44)

10 Reattach the shaving head holder to the bottom part of the shaving unit. (Fig. 27)

Cleaning the trimmer

Clean the trimmer every time you have used it.

1 Switch on the shaver with the trimmer attached.

2 Rinse the trimmer under a hot tap for some time. (Fig. 45)

3 After cleaning, switch off the shaver.

Tip: For optimal trimmer performance, lubricate the trimmer teeth with a drop of sewing machine oil every six months.

Storage

1 Slide the protection cap onto the shaving unit to prevent damage to the shaving heads (Fig. 46).

2 Specific types only: Store the shaver in the pouch supplied.

Replacement

For maximum shaving performance, we advise you to replace the top part of the shaving unit every year.
Only replace the top part of the shaving unit with an original RQ11 Philips Shaving Head Holder.

1 Pull the shaving head holder off the bottom part of the shaving unit (Fig. 26).

2 Attach the new shaving head holder to the bottom part of the shaving unit ('click') (Fig. 27).

Ordering parts

The following parts are available:
- HQ8505 adapter
- RQ11 Philips Shaving Head Holder
- HQ110 Philips Shaving Head Cleaning Spray
- HQ200 Philips Cleaning Fluid

Environment

- Do not throw away the appliances with the normal household waste at the end of their life, but hand them in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 47).
- The built-in rechargeable shaver battery contains substances that may pollute the environment. Always remove the battery before you discard or hand in the shaver at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way (Fig. 48).

Removing the rechargeable shaver battery

Only remove the rechargeable battery when you discard the shaver. Make sure the battery is completely empty when you remove it.

Be careful, the battery strips are sharp.

1 Remove the back panel of the shaver with a screwdriver.

2 Remove the rechargeable battery.

Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at **www.philips.com** or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Guarantee restrictions

The shaving heads (cutters and shaving guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The shaver does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving head holder (see chapter 'Replacement').

Problem	Possible cause	Solution
	Long hairs obstruct the shaving heads.	Clean the shaving heads by following the steps of the extra-thorough cleaning method (see chapter 'Cleaning and maintenance').
	The Jet Clean System has not cleaned the shaver properly, because the cleaning fluid in the cleaning chamber is soiled or the cleaning fluid level is too low.	Clean the shaver thoroughly before you continue shaving. If necessary, clean and refill the cleaning chamber (see chapter 'Cleaning and maintenance').
The shaver does not work when I press the on/off button.	The rechargeable battery is empty.	Recharge the battery (see chapter 'Charging').
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving head holder is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving head holder or replace it (see chapters 'Cleaning and maintenance' and 'Replacement').
	The temperature of the shaver is too high. In this case, the shaver does not work.	Let the shaver cool down. As soon as the temperature of the shaver has dropped sufficiently, you can switch on the shaver again.
The shaver is not entirely clean after I clean it in the Jet Clean System.	The cleaning fluid in the cleaning chamber is soiled.	Empty and rinse the cleaning chamber.
	The cleaning fluid level is too low. If the fluid volume in the cleaning chamber drops below the minimum level during the cleaning program, the program aborts. The cleaning light and the 'cleaning chamber empty' symbol flash at intervals and the holder returns to its starting position.	Refill the cleaning chamber with cleaning fluid to a level between the two lines (see chapter 'Cleaning and maintenance').
	You have used another cleaning fluid than the original Philips cleaning fluid.	Only use HQ200 Philips Cleaning Fluid.
The Jet Clean System does not work when I press the on/off button.	The Jet Clean System is not connected to the mains.	Put the small plug in the Jet Clean System and put the adapter in the wall socket.
	There is no electrical connection between the Jet Clean System and the shaver.	Press the shaver tightly into the holder to lock it into place.
The shaver is not fully charged after I charge it in the charger/ Jet Clean System.	You have not placed the shaver in the charger/Jet Clean System properly.	Make sure you press the shaver until it locks into place.

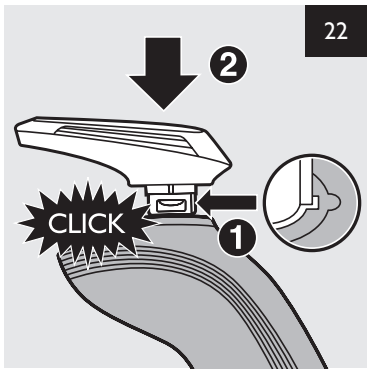
22
2
CLICK
1

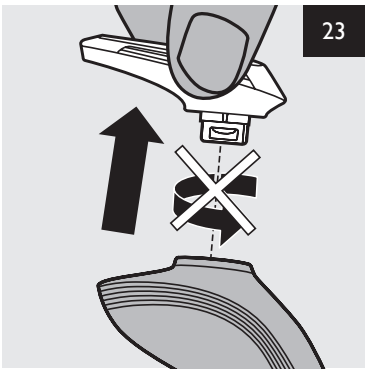
23

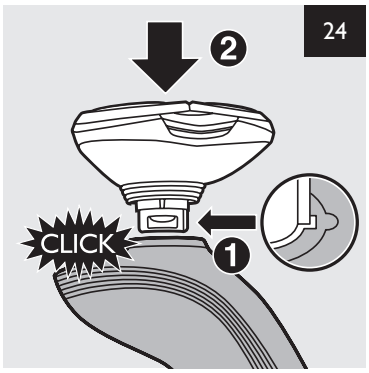
24
2
CLICK
1

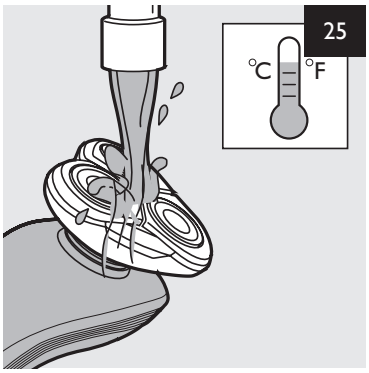
25
°C
°F

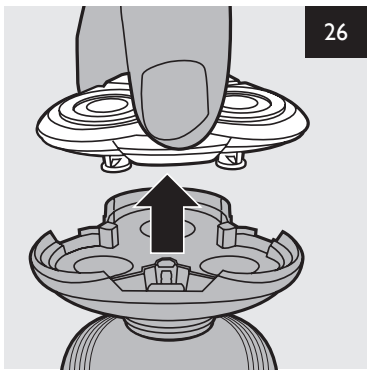
26

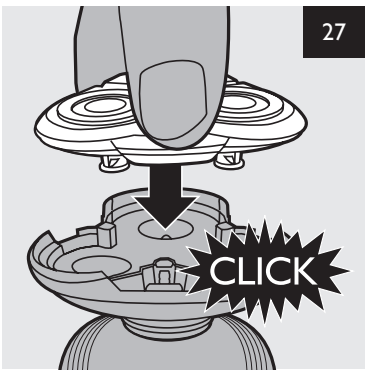
27
CLICK

28
1
2
1

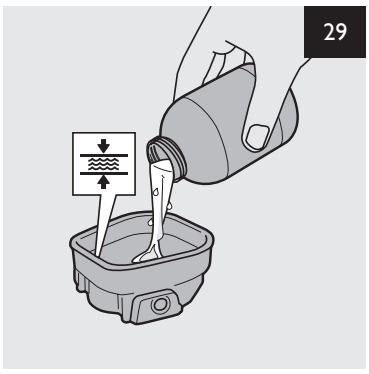
29

30
CLICK

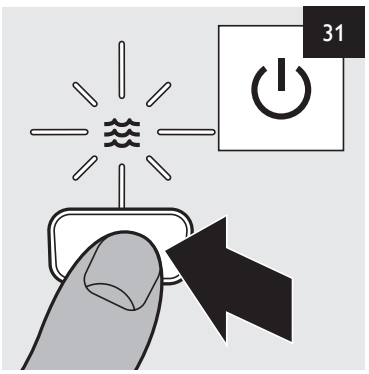
31

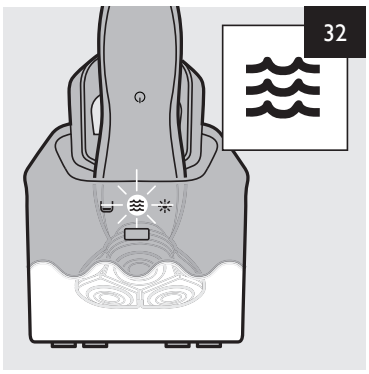
32

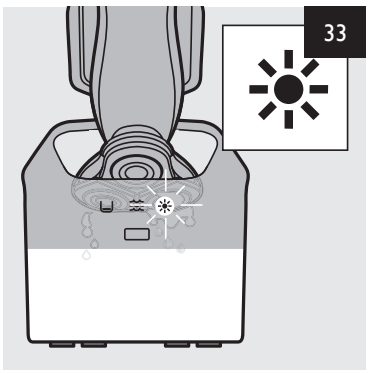
33

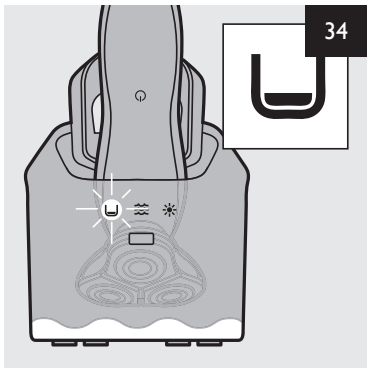
34

35

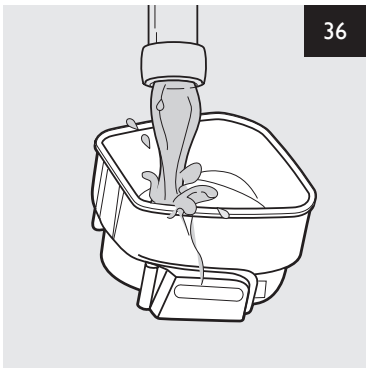
36

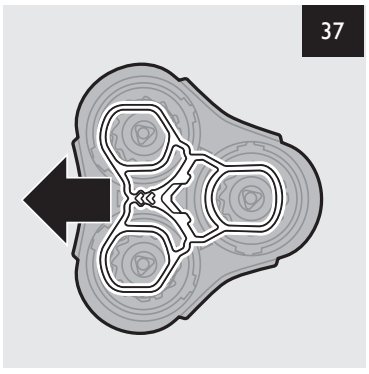
37

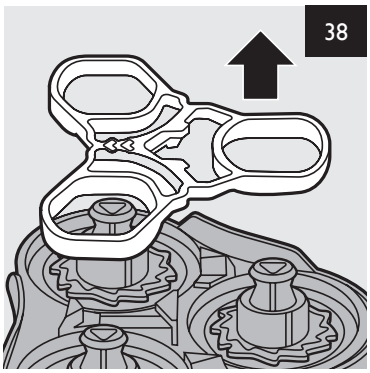
38

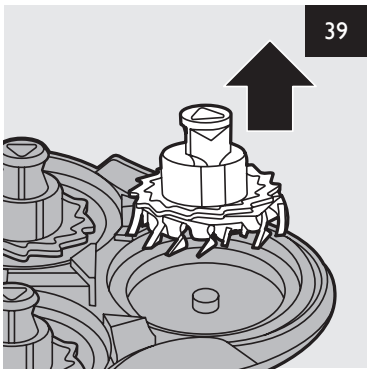
39

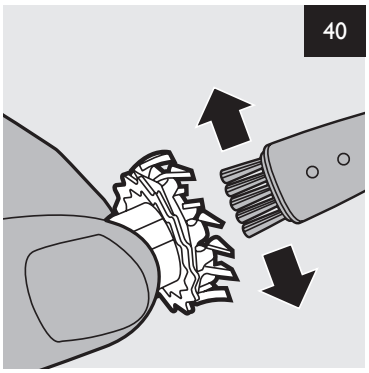
40

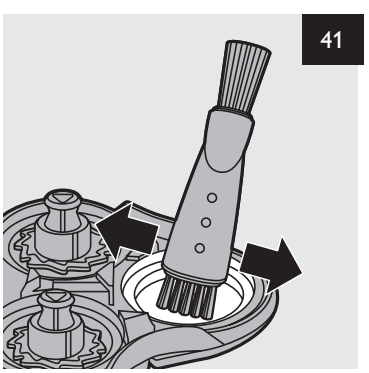
41

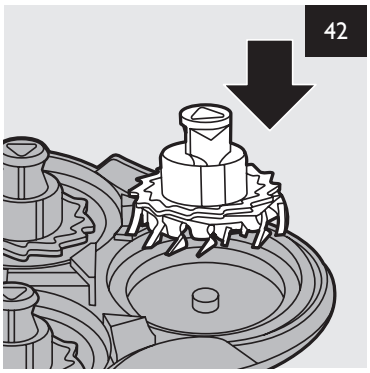
42

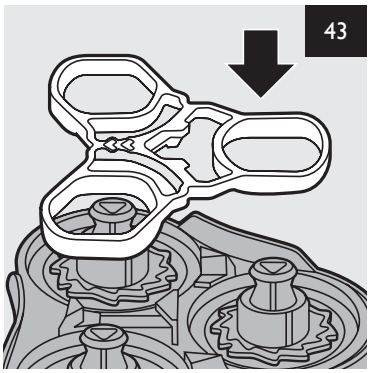
43

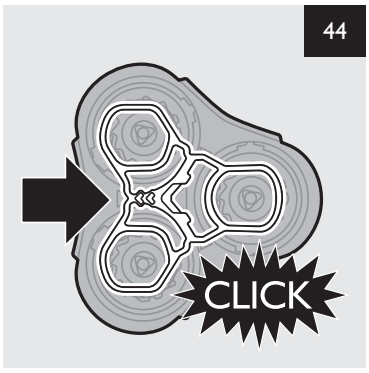
44
CLICK

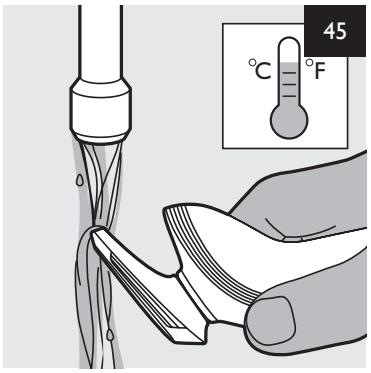
45
°C
°F

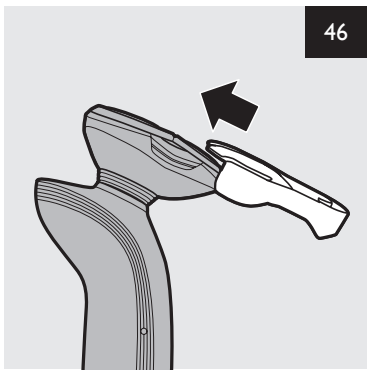
46

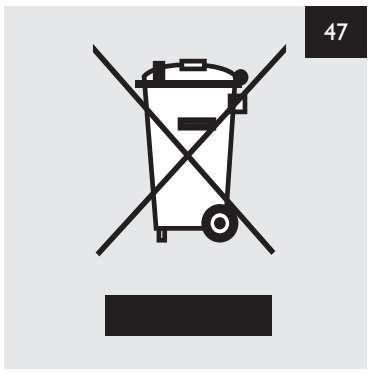
47

48